



MAGNILUMEN™

Floor Display Set-up Instructions



All displays are 0-10V dimmable with switch on the back.

Your Magnilumen Floor Display is wired and ready for use, however a few small things need to be done for it to be fully ready for your sales area. You'll need to attach the brochure card holder and place a sign in the top of the fixture, which can be done in a few simple steps.

STEP 1:



Take the display out of the box and stand it upright. Your display already has a Magnilumen Retrofit Kit installed in it and is wired for use.

STEP 2:



Affix the brochure card holder in line with the screw holes pre-drilled in the front of the fixture with the double-sided tape on the back.

STEP 3:



Place the sign in the slot at the top of the display.

That's it! Simply plug in your display, and you have a working floor model of our GAME CHANGING Magnilumen Magnetic Retrofit Kit!